

UM-510


Dual Counterbalance Monitor Arm

- EN
- User Manual
- PL
- Instrukcja Obsługi
- DE
- Bedienungsanleitung
- FR
- Manuel D'utilisation
- NL
- Gebruiksaanwijzing
- IT
- Manuale D'uso
- ES
- Manual de Instrucciones
- CZ
- Uživatelská Příručka
- SK
- Návod na Používanie
- RO
- Instrucțiuni de Utilizare
- HU
- Felhasználói kézikönyv
- UA
- Посібник користувача

SMA302 | Manual version 1/20250515


NOTE!

Prior to beginning the grommet or clamp installation, remove the plastic cover and break off the USB tab as shown. Insert the USB cable and Type-C cable into the space as shown.

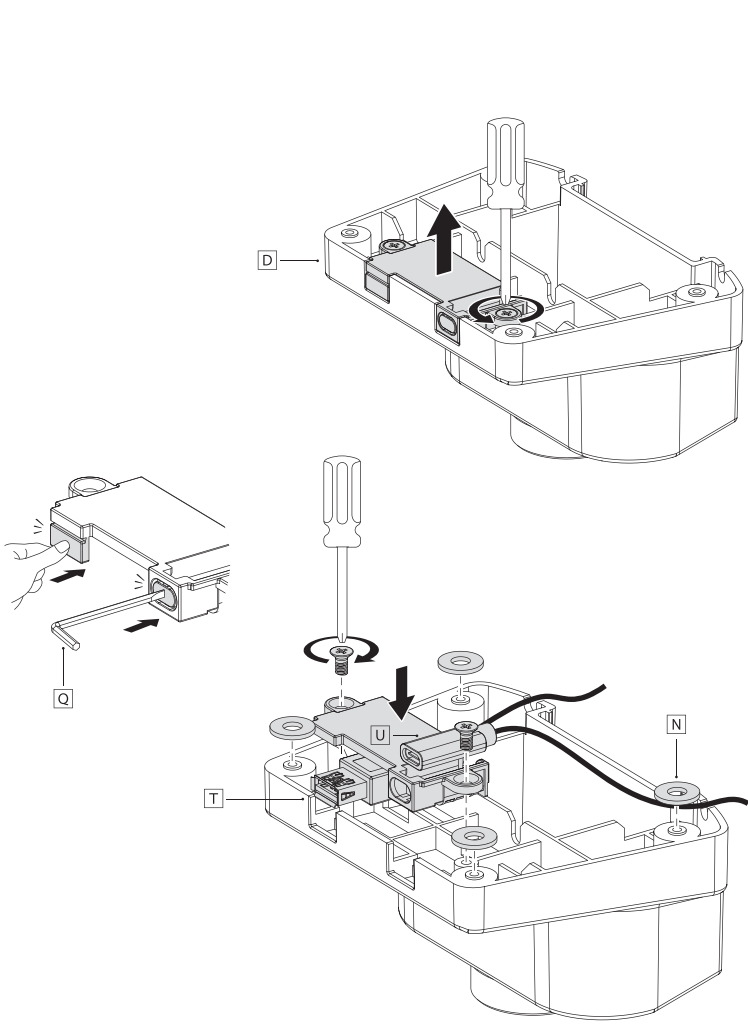

CLAMP INSTALLATION

For 10~50mm thickness desks.

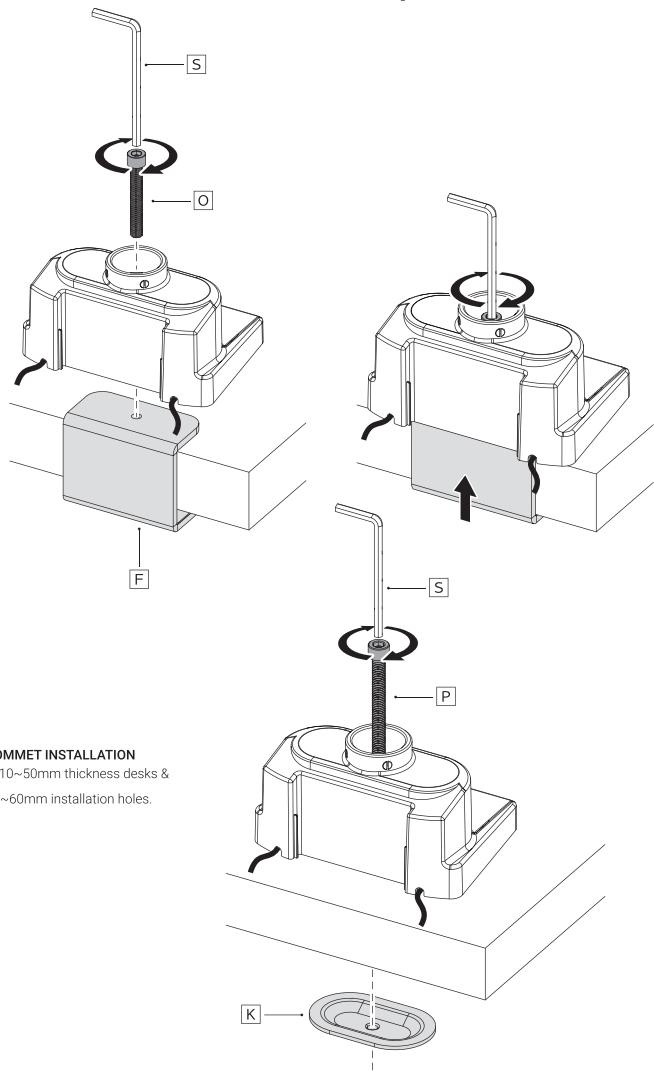


GROMMET INSTALLATION

For 10~50mm thickness desks & Ø10~60mm installation holes.






NOTE!

When attaching the clamp to desktop, please press the USB cable into the groove.

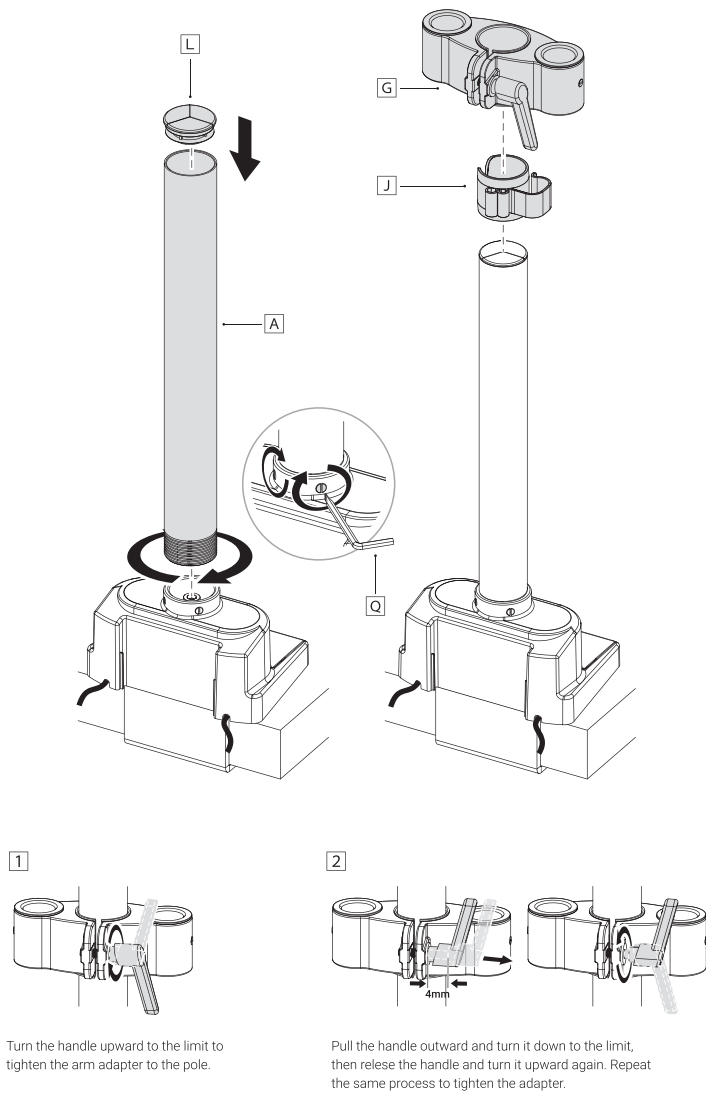


Turn the handle upward to the limit to tighten the arm adapter to the pole.

Pull the handle outward and turn it down to the limit, then release the handle and turn it upward again. Repeat the same process to tighten the adapter.

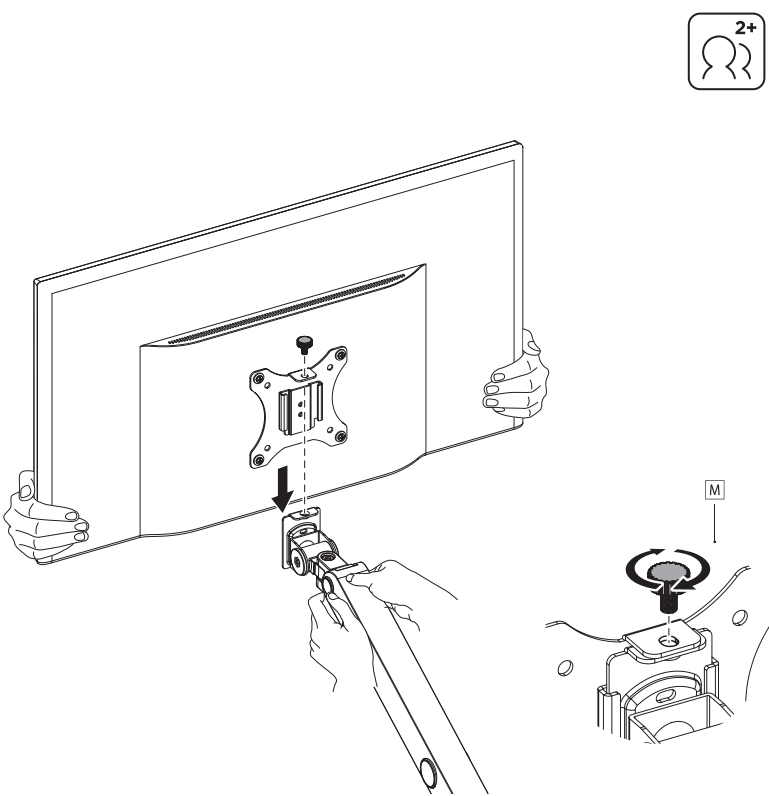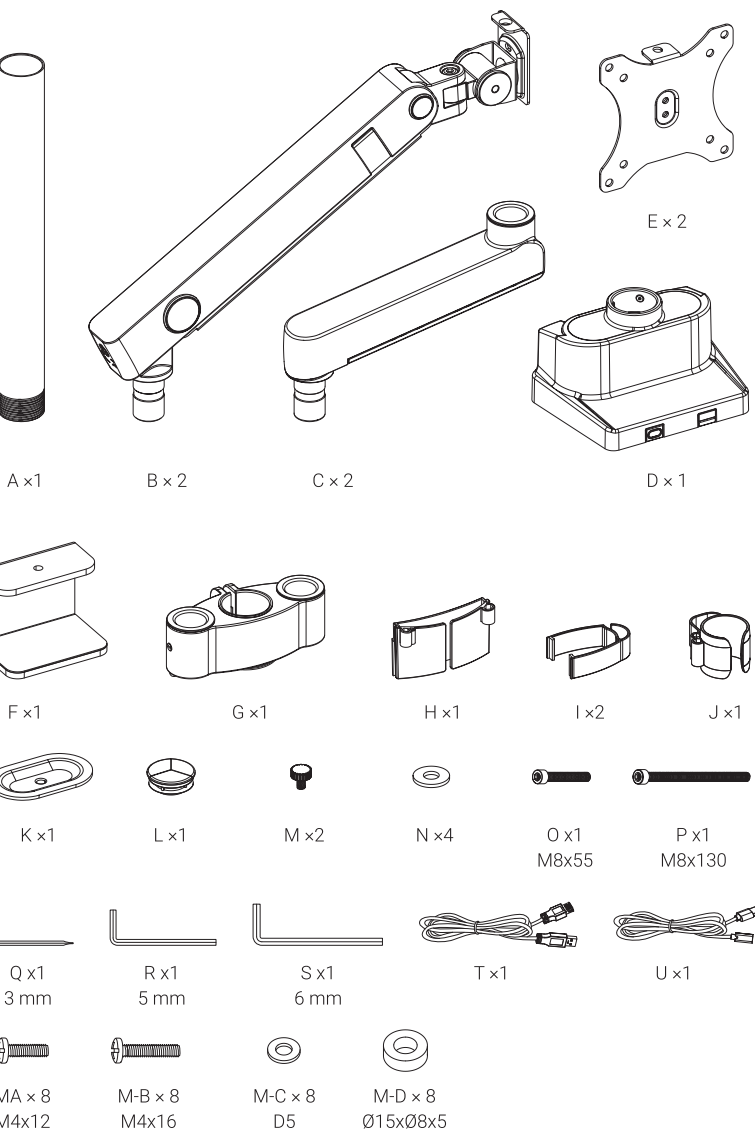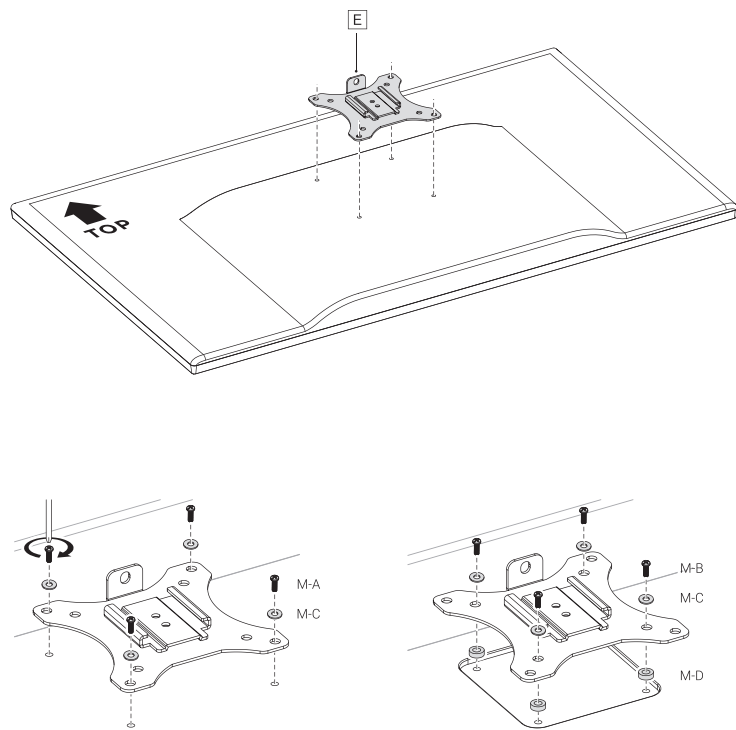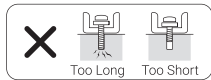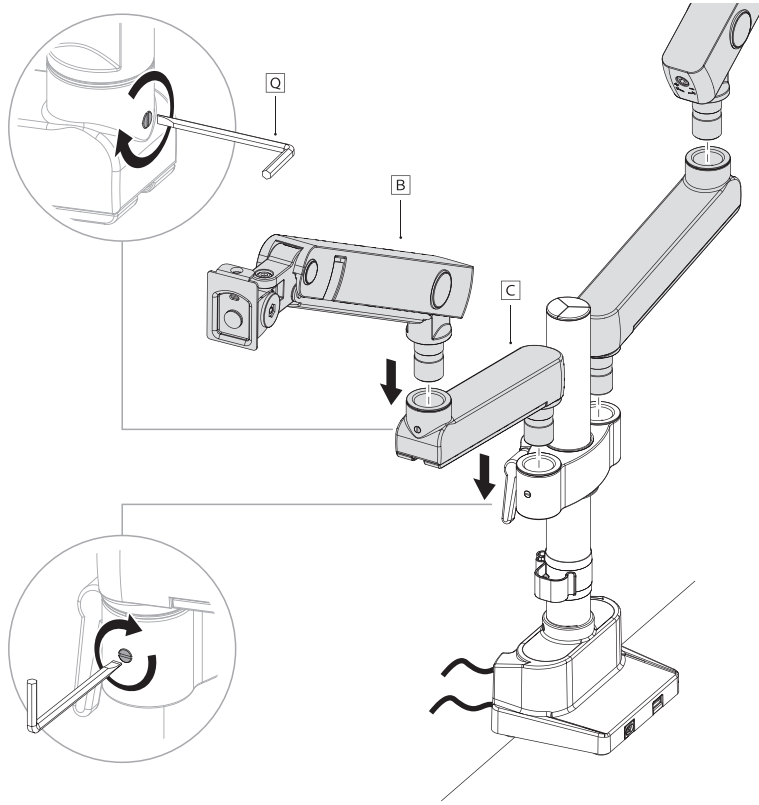

CAUTION: Do not release the monitor immediately after hanging and wait until you are sure it is stable in its position to prevent injury to personnel or equipment. If the arm rises or falls, refer to the next step for adjustment.

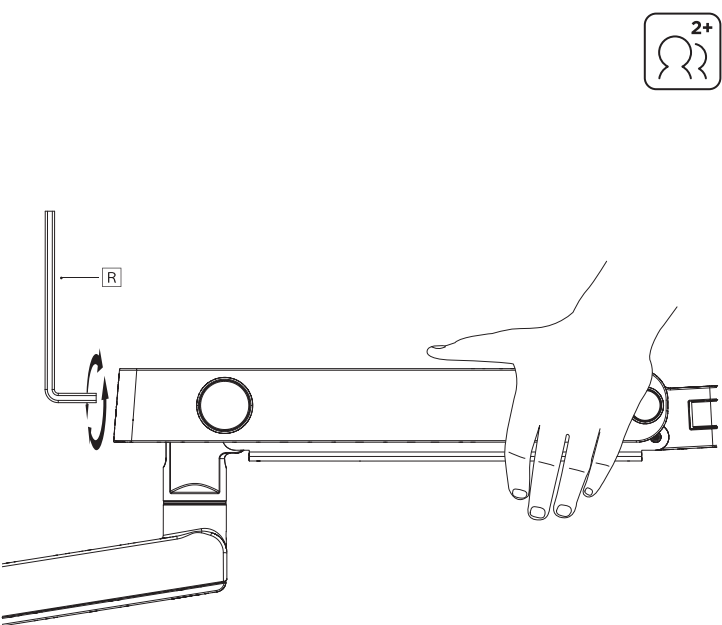

Before adjusting the spring tension and during the adjustment process, **position and hold the arm horizontally as shown**. Use the supplied Allen Key for adjustment. Ask for assistance should you require it.




If the arm **drops**, turn the adjustment screw in the + direction until it stays in a horizontal position.


If the arm **rises**, turn the adjustment screw in the - direction until it stays in a horizontal position.



CAUTION: DO NOT over tighten the screws.

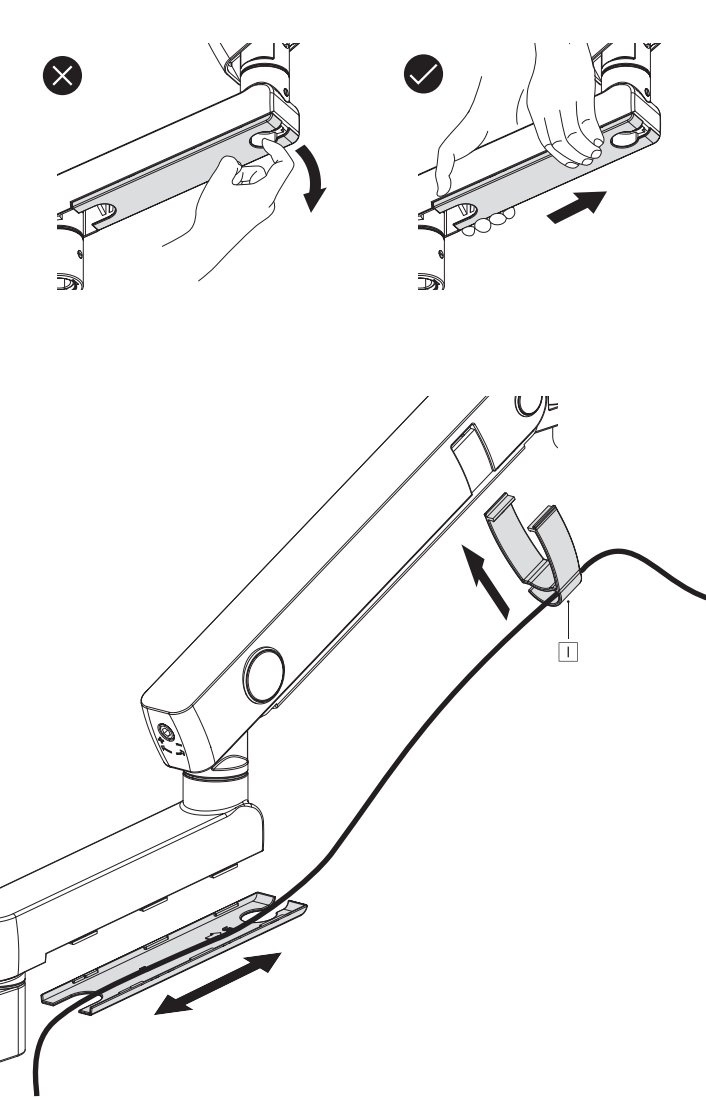

Note: If the display does not stop at your desired position adjust the crews using the tools as shown.

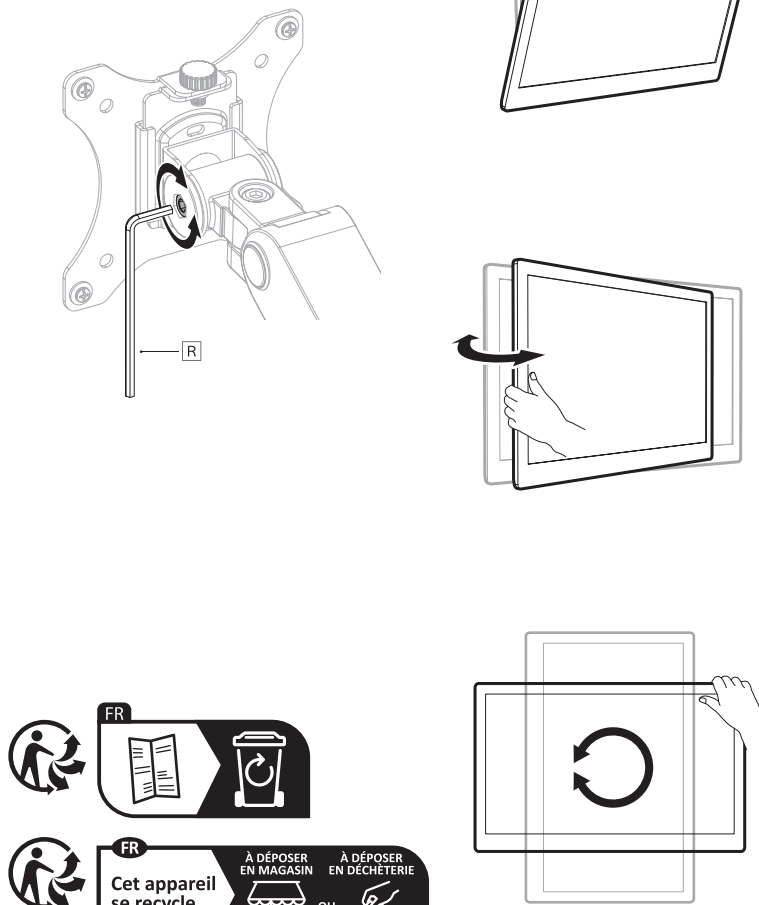

CAUTION: DO NOT rotate the monitor past rear edge of the desc to avoid an unstable situation that may cause tipping.

